

CODESYS 3.5.9.30 Release note

(Release: 2017-07-18)

Delivery: CODESYS RT Packages [Novisu, Visu, WebVisu, VisuWebVisu]

Version: V3.5.9.30-106

Devices: CCpilot XA,XS,VA,VC

Descriptor: cc_arm_linux_devdesc.xml

COPYRIGHT: 2017 CrossControl AB

Files

| File | Description |
|---------------------------|-------------|
| CODESYS-Release-notes.pdf | This file |

CODESYS tool files

| File | Description |
|--------------------------|---|
| cc_arm_linux_devdesc.xml | Device descriptor file |
| CCAux.library | CODESYS library (v3.5.4.5) with access to a number of HW related features |
| CCSap.library | CODESYS library (v3.5.9.3) with API used to access Data Engine |

Runtime installation files

| File | Description |
|--|---|
| CoDeSys_novisu_ARM_device_V3.5.9.30-106.run | Run time system installer for NO GUI solutions |
| CoDeSys_visu_ARM_device_V3.5.9.30-106.run | Run time system installer for GUI solutions |
| CoDeSys_webvisu_ARM_device_V3.5.9.30-106.run | Run time system installer for WebGUI solutions |
| CoDeSys_visuwebvisu_ARM_device_V3.5.9.30-106.run | Run time system installer for GUI/WebGUI solutions |

Runtime (.run files) file content

| File | Description |
|--------------------|--|
| codesyscontrol | CODESYS runtime (v3.5.9.30) |
| libCCAux.so | CODESYS component CCAux (v1.0.3) for accessing cc-aux library (v2.8.3) |
| libCCSap.so | CODESYS component CCSap (v1.0.4) for accessing Data Engine (v3.0.1) |
| CODESYSControl.cfg | Configuration file of CODESYS runtime |
| codesys-launch.sh | Used by auto-start script /opt/etc/init.d/codesys-deploy.sh to configure environment and start runtime |
| rts_set_baud.sh | Script used by runtime to config/start CAN interfaces |

CODESYS 3.5.4.20 Release note

(Release: 2015-11-30)

Delivery: CODESYS RT Packages [Novisu, Visu, VisuWebVisu]

Version: 3.5.4.2-2

Devices: CCpilot XA,XS,VA,VC

Descriptor: arm-default.devdesc.xml

COPYRIGHT: 2015 CrossControl AB

Files:

| File | Description |
|---------------------------|-------------|
| CODESYS-Release-notes.pdf | This file |

CODESYS tool files

| File | Description |
|-------------------------|---|
| arm-default.devdesc.xml | Device descriptor file |
| CCAux.library | CODESYS library (v3.5.4.2) with access to a number of HW related features |
| CCSap.library | CODESYS library (v3.5.4.2) with API used to access Data Engine |

Runtime installation files

| File | Description |
|--|---|
| CoDeSys_novisu_ARM_device_3.5.4.2-2.run | Run time system installer for NO GUI solutions |
| CoDeSys_visu_ARM_device_3.5.4.2-2.run | Run time system installer for GUI solutions |
| CoDeSys_visuwebvisu_ARM_device_3.5.4.2-2.run | Run time system installer for GUI/WebGUI solutions |

Runtime (.run files) file content

| File | Description |
|--------------------|--|
| codesyscontrol | CODESYS runtime (v3.5.4.20) |
| libCCAux.so | CODESYS component CCAux (v1.0.1) for accessing cc-aux library (v2.7.3) |
| libCCSap.so | CODESYS component CCSap (v1.0.4) for accessing Data Engine (v2.1.0) |
| CODESYSControl.cfg | Configuration file of CODESYS runtime |
| codesys-launch.sh | Used by auto-start script /opt/etc/init.d/codesys-deploy.sh to configure environment and start runtime |
| rts_set_baud.sh | Script used by runtime to config/start CAN interfaces |